
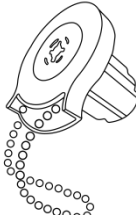
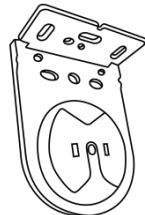



INSTALLATION GUIDE

EXPOSED ROLL


Hardware and Parts Included

			
Part A	Part B	Part C	Part D

INSIDE MOUNT

Step 1: Mark Bracket Placement

At the top-right corner of the window, measure how deep you wish to place your bracket (at least 2 3/8" required), and make a mark with your pencil. Repeat this step at the top-left corner of the window, using the same depth measurement.

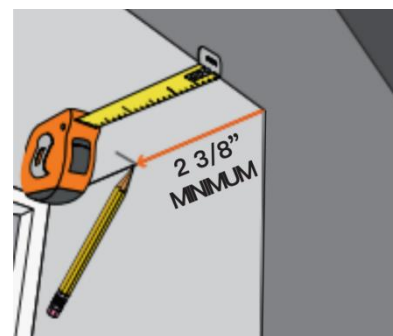

Step 2: Align Brackets and Mark Screw Holes

Set your bracket in the window so that the back edge aligns with your mark. Hold the bracket in position and use your pencil to mark through the top screw holes (TOP MOUNT).


Repeat this step with your corresponding bracket on the opposite side of the window.



Step 3: Pre-Drill Screw Holes and Secure Brackets


Pre-drill holes with a 1/64" drill bit at your previous marks on each side of the window.

Line up each bracket with the holes you drilled, and insert the screws. Once you have secured both brackets, you're ready to mount the shade into the window.

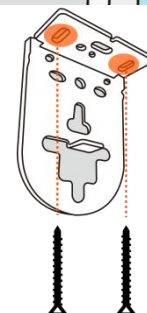


Step 4: Attach the Shade

NOTE: Use a tape measure to check that each bracket is set to the same depth. If you need to make adjustments, slightly loosen the screws on a bracket and shift it back or forward. Secure the screws when the position is corrected. Locate the depression end (B) of the blind into the cross-shaped hole in the corresponding bracket (A). Locate the pin on the left end of the shade(D), and gently slide it into the center slot on the pin bracket(C).

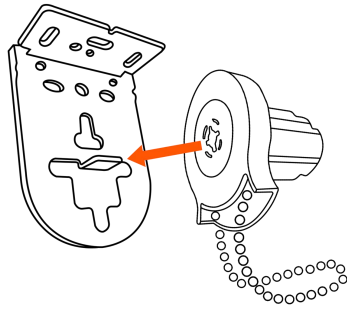

Part A

Part B

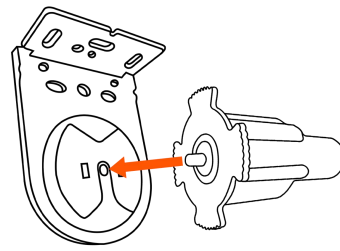


Part C

Part D

OUTSIDE MOUNT

Step 1: Measure Bracket Height

At the top-left and top-right corners of the window, measure the height you wish to place your brackets (at least 2 3/8" required) and make a mark with your pencil.

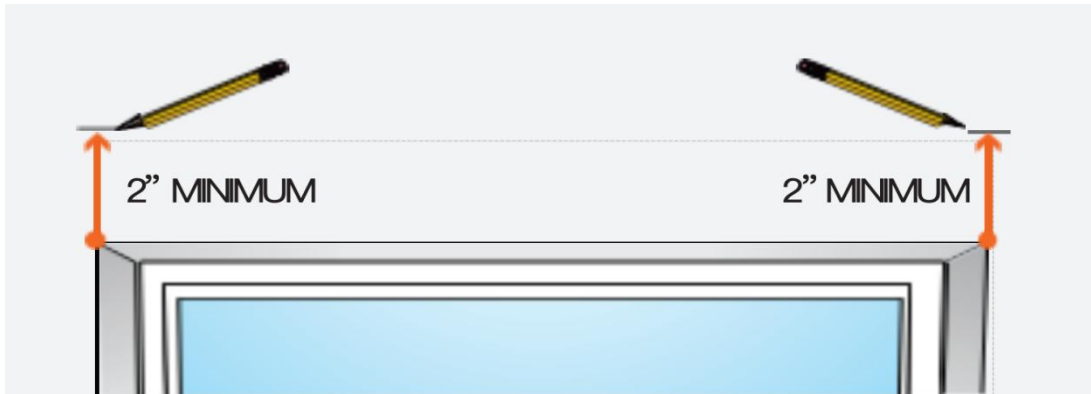

Step 2: Calculate and Mark Bracket Position

Determine the difference in width between your shade and your window, and then divide it in half. From your previous marks, measure this distance away from the window, and make another mark with your pencil.

EXAMPLE: If your window is 48" wide and your roller shade is 52", the difference is 4". This means we measure and mark 2" away from the window, starting at the previous marks.



Step 3: Mark Screw Hole Locations



Center the left-side bracket at the outermost mark as shown, and use your pencil to mark the screw holes. Repeat this step with your right-side bracket at the outer- right mark.

Step 4: Pre-Drill Screw Holes and Secure Brackets

Note: Before installing the brackets, please decide on the position of the Continuous Cord Loop Lift. Then, install Part A on the chosen position.

Pre-drill the screw holes with a 1/64" drill bit at your marks on both sides of the window. Before you attach the brackets, you may want to erase any pencil marks that remain on the mounting surface.

Lineup your left-side bracket with the screw holes, and insert two screws to secure the bracket to the mounting surface. Repeat this step for your right-side bracket. When both brackets are secure, you're ready to mount the shade into the window.

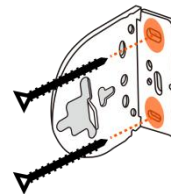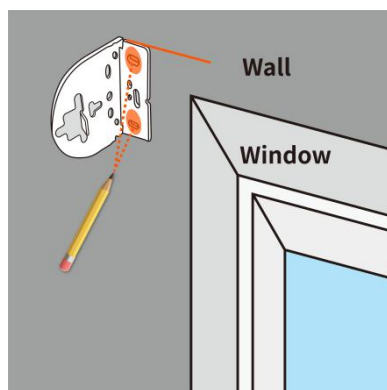


Step 5: Attach the Shade

Note: Before Attaching the Shade, you should first insert Part B and Part D into both ends of the roller shade.


Locate the depression end (A) of the blind into the cross-shaped hole in the corresponding bracket (B).

Locate the pin on the left end of the shade(C), and gently slide it into the center slot on the pin bracket(D).

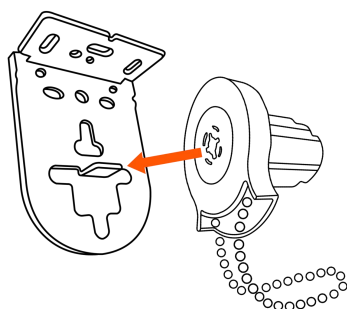

Part A

Part B

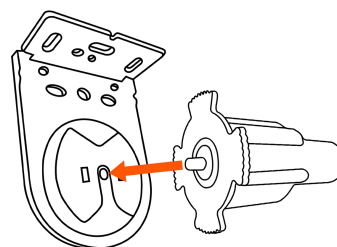

Part C

Part D

ADDITIONAL INSTRUCTIONS


INSTALLING CORD WEIGHT

NOTE: Cord or chain cord weights are used to ensure the smooth operation of your shade and to help protect children from getting tangled in loose chains. If there is any protective plastic around the chain, remove it before you proceed. Before doing anything, you must first slide the cord weight to the bottom of the bead chain loop.

- Insert a small screwdriver, punch, or awl through the screw at the bottom of the cord weight.
- While pressing the cord weight release buttons on the sides, move the screw hole down to release the safety mechanism.
- Slide the cord weight down to the bottom of the bead chain loop, position it at the desired location.
- Mark the window casement at the notch in the cord weight.
- The goal of using the cord weight is to make the chain taut but still slightly loose. The center of the screw hole should be aligned with the notch in the UCT ($\pm 1/8"$). The cord weight can be mounted in two ways (Inside Mount, Outside Mount).


INSIDE MOUNT

Position the cord weight with its spring-loaded screw hole aligned with the mark. Insert the longer provided screws into the spring-loaded screw hole in the cord weight and attach the screws. As shown in the figure.

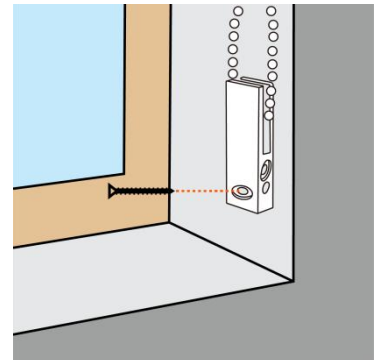

OUTSIDE MOUNT

Position the cord weight with its spring-loaded screw hole aligned with the mark. Insert the longer provided screws into the spring-loaded screw hole in the cord weight and attach the screws. As shown in the figure.

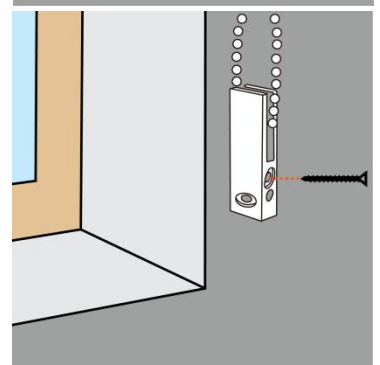

CAUTION:

- The window covering will not operate properly unless the cord weight is secured.
- Locate the cord weight as close to the window glass as possible to minimize accessibility by children and pets.
- Be sure the cord weight is not placed in the path of the bottom rail or fabric. This may cause the bead chain to become too tight, affecting the shade function and increasing bead chain wear.

WARNING:

A damaged, loose, or missing cord weight poses a strangulation risk to children. Remove from use and repair or replace if the cord weight is damaged, loose, or missing.

Cleaning Procedures

All Sense Roller Shades have multiple cleaning options.

NOTICE: Avoid contact with window cleaning products. Improper cleaning may void warranty.

DUSTING

Use a feather duster for regular cleaning.

FORCED AIR

Blow away dirt and debris using clean compressed air.

PROFESSIONAL INJECTION/EXTRACTION CLEANING

Call local on-site blind/shade cleaner that injects a cleaning solution into the fabric and extracts the dirty solution at the same time. The service is typically performed at home so you do not need to remove your window treatments.

VACUUMING

Use a low suction vacuum with a brush-type cleaner attachment; stroke lightly over the shade to clean.

SPOT-CLEANING/STAIN REMOVAL AT HOME

Use warm water and a mild soap, like Woolite® or Scotchgard®, if needed. Do not immerse shade in water.

WARNING



Products with a Damaged, Loose, or Missing Cord Weight Device Pose a Strangulation Risk to Children. This Window Blind is equipped with a Cord Weight Device.

- Remove from use and repair or replace if the cord weight device is damaged, loose, or missing.
- Cord weight device must be securely attached to wall or floor.
- Children can climb on furniture to reach cords.
- Fasteners provided with cord weight device may not be appropriate for all mounting surfaces.
- Use appropriate anchors for mounting surface conditions.
- Tag to be removed only by end-user.